

# MAINSTREET GOLD MENU SYSTEMS

## RACEWAY REPLACEMENT INSTRUCTIONS

### STEP 1

Disconnect the menu system from power source.

### STEP 2

Remove the door and all lamps from the menu system lightboxes requiring raceway replacement (see Diagram 1).

### STEP 3

Remove all the Phillips head screws from around the black perimeter of the raceway and Phillips head screws from the white inside of the raceways (previously hidden by the lamps). (See Diagram 2).

**NOTE:** Refer to Diagram 5 for placement of screws that should not be removed.

### STEP 4


Grasp the raceway by the finger grabs on the bottom of the raceway and gently remove the raceway (see Diagram 3).

### STEP 5

Orient the new raceway by viewing the "This Side Up" label. The raceway should slide under the spring hinge retainer and fall into place engaging the electrical connector smoothly (see Diagram 4). Replace all screws, lamps and door. Restore power to the menu system. If it does not light, refer to the troubleshooting guide.

**WARNING:** The maximum allowable current draw from one master cord is 9 AMPS. To determine total system current draw, add up the AMP rating labeled on the inside of each lightbox, or refer to Table 1.

DIAGRAM 1

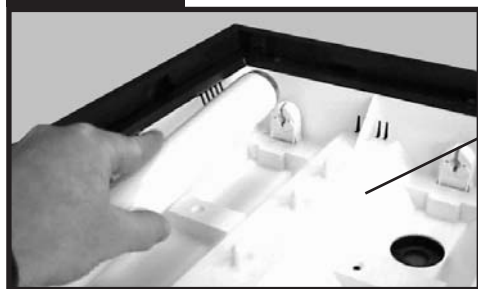

Raceway

DIAGRAM 2

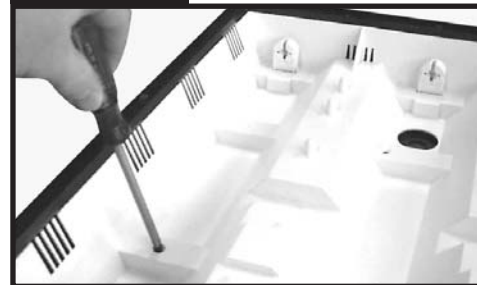


DIAGRAM 3



Finger Grabs

DIAGRAM 4



Spring Hinge Retainer


TABLE 1

### REPLACEMENT RACEWAY CURRENT DRAW BY BOX

18" x 18"	A (Module)	1.05 AMPS
18" x 27"	D (Module)	1.05 AMPS
27" x 18"	E (Module)	1.05 AMPS
27" x 27"	F (Module)	1.40 AMPS
36" x 27"	G (Module)	2.10 AMPS
36" x 18"	N (Module)	2.10 AMPS

DIAGRAM 5

## Light Box Specifications

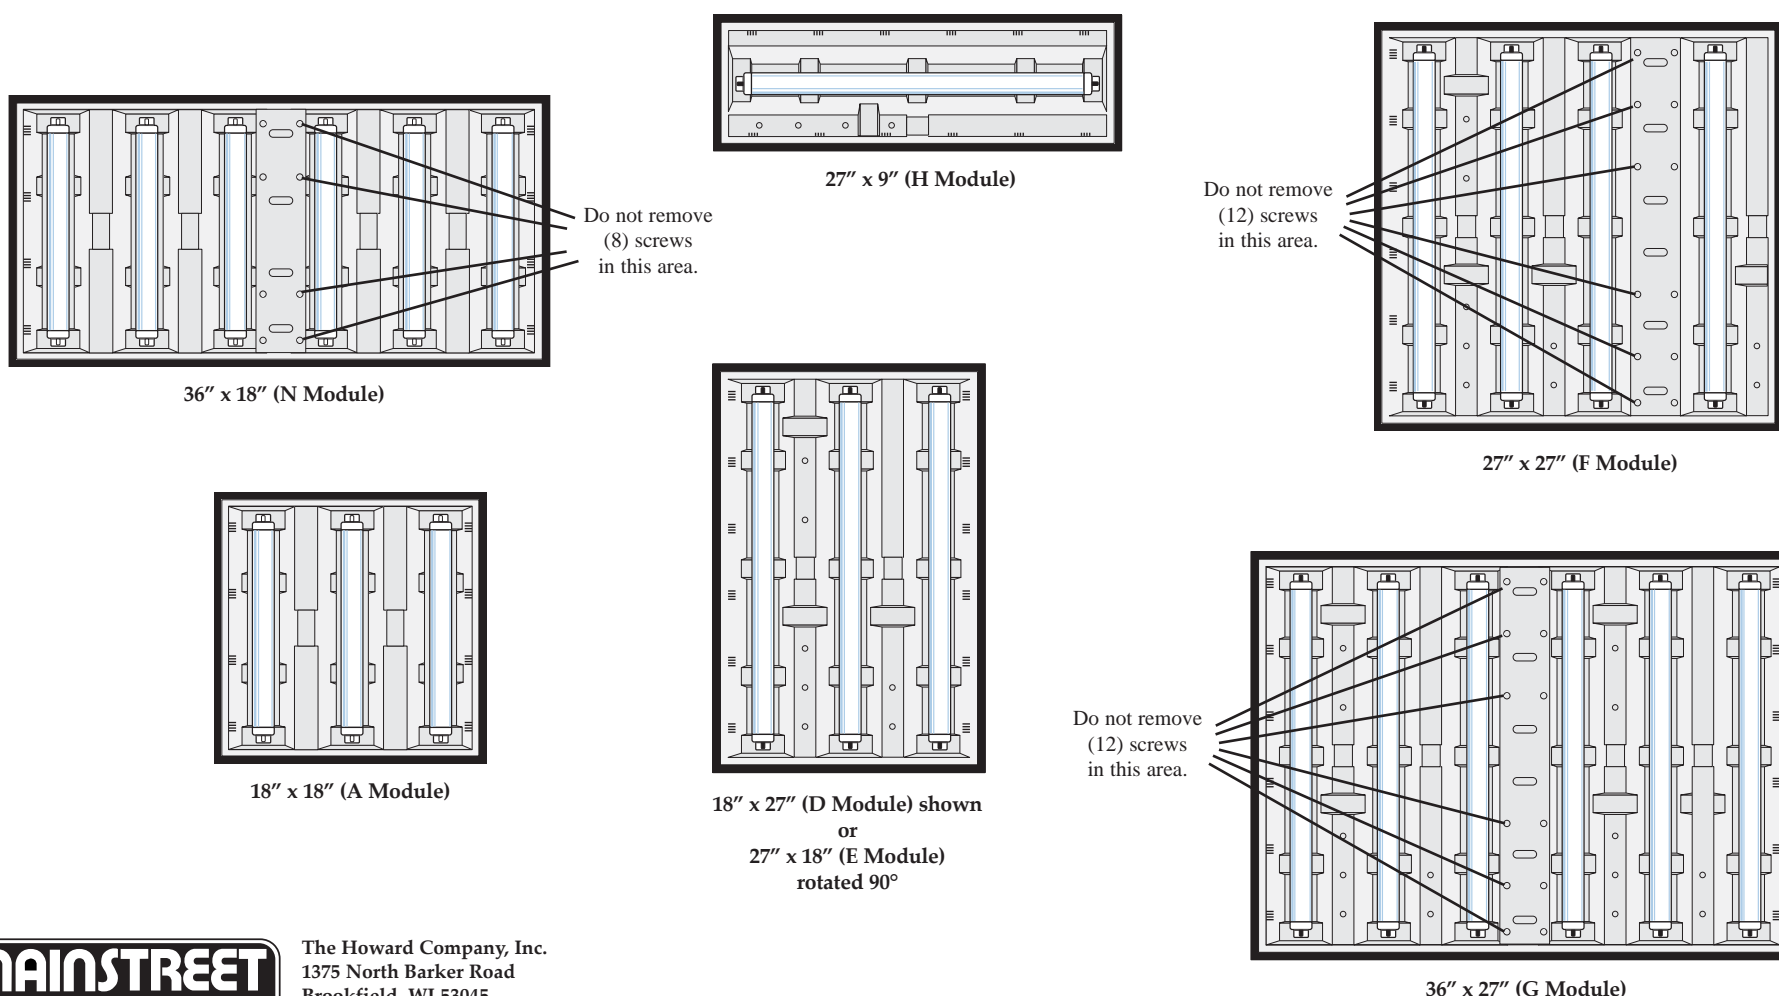

**MAINSTREET**  
- menu systems -

A PRODUCT OF THE HOWARD COMPANY, INC.

The Howard Company, Inc.  
1375 North Barker Road  
Brookfield, WI 53045  
Telephone: (414) 782-6000 • (800) 782-6222 • Fax: (414) 782-6515  
Internet: <http://www.MainstreetMenus.com> E-Mail: [CustomerService@MainstreetMenus.com](mailto:CustomerService@MainstreetMenus.com)